



1 Display Window

2 Channel Selectors

3 Pin Connector

e|mana



Instructions for eMana EF-6630 iPod FM transmitter

- 1** Find an empty radio channel, such as 88.1 MHz.
- 2** Plug in the FM transmitter through 30 pin connector onto iPod player.
- 3** Press play/pause button on iPod player to turn on the FM transmitter. Sometimes it may take up to 20 seconds for it to start depending on the iPod model. The display window will light up and show last radio frequency channel.
- 4** To tune radio frequency on the FM transmitter, press the forward/backward channel selector. Short press of button will allow tuning in 0.1MHz interval. Longer press of button will allow tuning in 1MHz intervals.
- 5** LCD backlight on the FM transmitter will automatically dim after 7 seconds without operation. If the FM transmitter detects no audio signal from iPod for 45 second, then it will also automatically switch off.
- 6** The position of the device will also affect the signal strength of the listening experience.
- 7** Make sure to pause the iPod player before disconnecting the FM transmitter.
- 8** Power Source: iPod Player (3.3V 23mA).

e|mana