



eMana
USB FM Transmitter
User's Guide

e|mana
Amplify your music experience



Specifications

- Power source: Cigarette adapter or USB (5V) device powered
- Supported music type: MP3
- Frequency: Full – 88.1 - 107.9 MHz
- Input terminal: USB port, F3.5 stereo connector
- Output terminal: Audio out (3.5 mm jack)
- Equalization features built-in: normal, classic, rock, jazz, bass.



Instructions

1 Connect the cigarette adapter at one end to the car cigarette port, the other end to the USB mini 5 port on the main body **2** Connect the USB pen-drive to the USB-A port **3** Press **▶** for more than a couple of seconds. Circular disc signs on the left of the LCD screen will appear rotating, meaning it is reading the pen-drive **4** Choose an empty radio channel, press the menu button to select different functions. Press until **⏮** sign appears on the top left of the LCD screen, then press next or previous for channel selection **5** Tune in the radio to the same channel as the product to enjoy music.

The USB mini 5 port is for power source connection only.

The Audio out connects to headphones or mini speakers – ensure the sound source switch is at AUX.

The Audio in connects to iPod, MP3, CD and MD players.

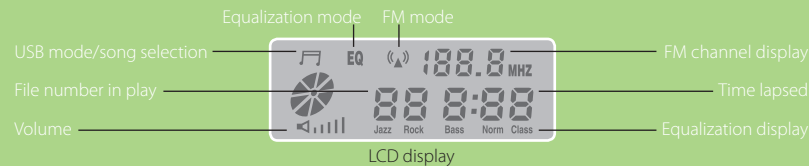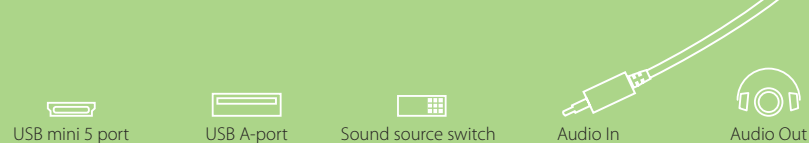

- Power on/off:** Press the power button for more than 3 seconds.
- Play/pause:** Press the power button once briefly.
- Menu button:** Selecting songs, **EQ** equalization and **⏮** FM channel selection.
- Next button:** When the eMana is in USB mode it is possible to select songs. Hold button for a few seconds to increase volume. When the menu function is switched to FM mode it is possible to select FM channel.
- Previous button:** When the eMana is in USB mode it is possible to select songs. Hold button for a few seconds to decrease volume. When the menu function is switched to EQ it is possible to select 5 sound effects. When the menu function is switched to FM mode it is possible to select FM channel.
- Sound source:** Move the sound source switch to choose USB memory or AUX (MP3 player).

Note: When the sound source button is switched to Aux mode (Audio in), only the FM channel selection will be operable on the LCD display.



Caution

- Do not try to change the frequency while you are driving. This may affect the driving safety.
- Do not place this product in locations with high vibrations or anywhere it may impede the driving.
- Avoid extreme high and low temperatures, humidity, direct sunlight and dust.
- Do not place this product near magnets or mobile phones, as these can interfere with transmission.
- If unable to power on the device, please unplug the DC5V power cable first, and then plug it into the socket. Operate the device as usual afterwards.

Troubleshooting

- If the sound is unclear, turn down the volume on the audio source.
- If the eMana is used with a player with multiple connections, signal blocking may occur. Separate the connections to solve this problem.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Notice: Any changes or modification not expressly approved by the party responsible could make void the user's authority to operate the device.